


EASY

MANUALE



IT ASPIRATORE ELICOIDALE DA PARETE
EN WALL-MOUNTED AXIAL FAN
FR AÉRATEUR AXIAL POUR MUR
DE AXIALER WANDVENTILATOR
ES VENTILADOR HELICOIDAL MURAL

IT Prima di procedere con l'installazione leggere attentamente il manuale delle avvertenze generali.
EN Read the precautions manual carefully before installing this appliance.
FR Avant de procéder à l'installation, il faut lire attentivement le manuel des instructions générales.
DE Bitte lesen Sie sich die Sicherheitshinweise der Gebrauchsanleitung aufmerksam durch, bevor Sie das Gerät installieren.
ES Lea detenidamente el manual de advertencias antes de instalar este aparato.


1

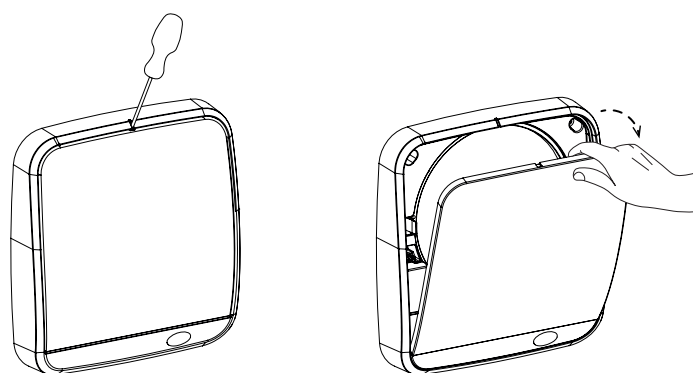


2

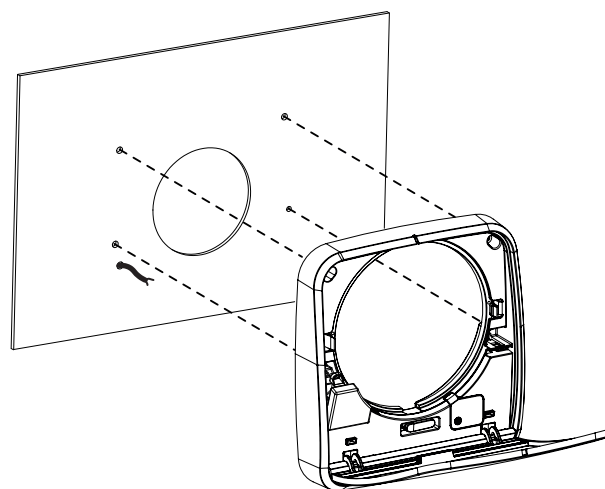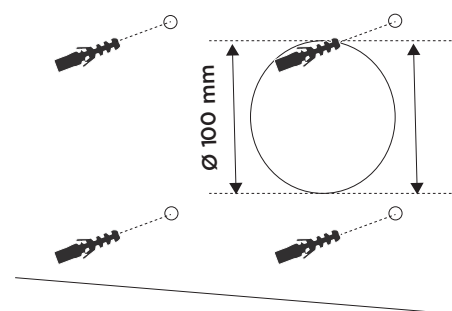


3A

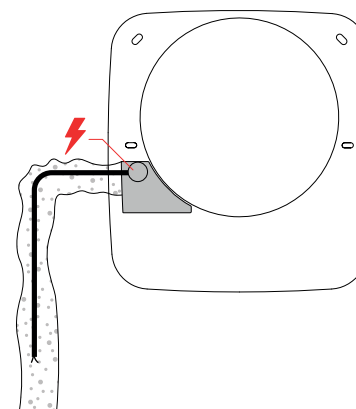


3B

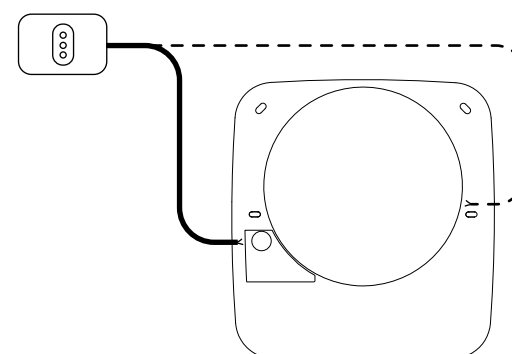

4

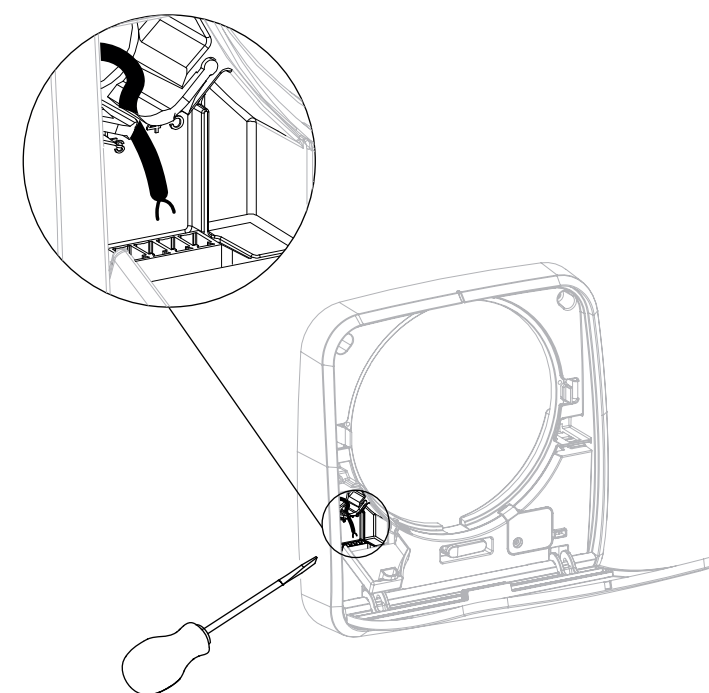


5

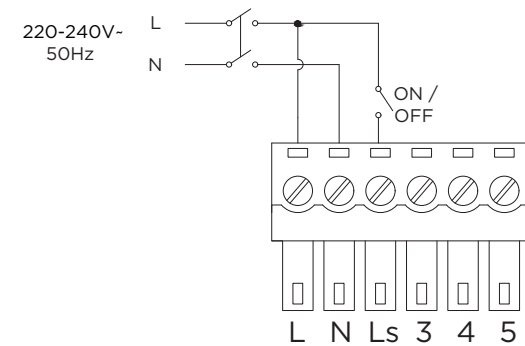


"Ls" is an "induced phase," so when the circuit is closed (and then reopened) the extractor still starts and extract for time set by the humidity dip switches (see step 11), so it is possible to connect an ON/OFF switch (bathroom light) or a pushbutton as a pulse is enough to activate the timer function.

6

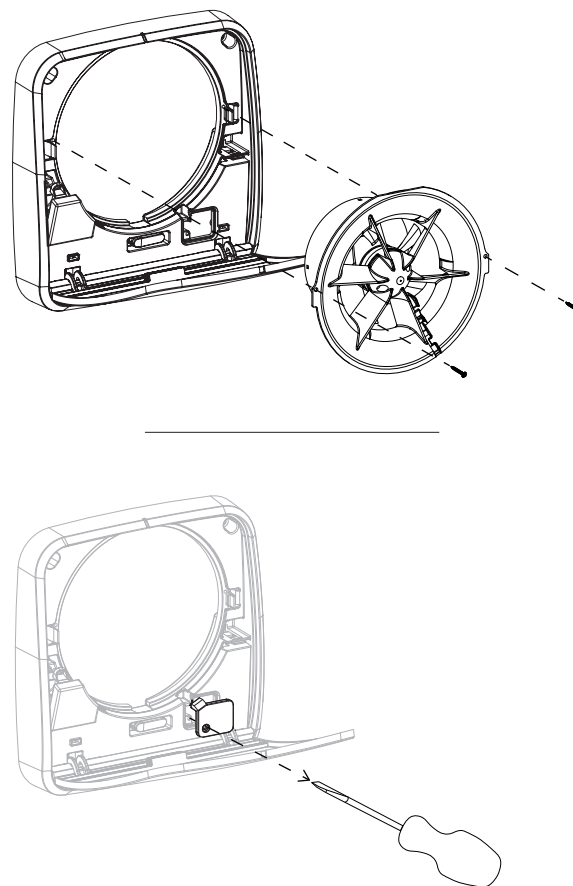


7

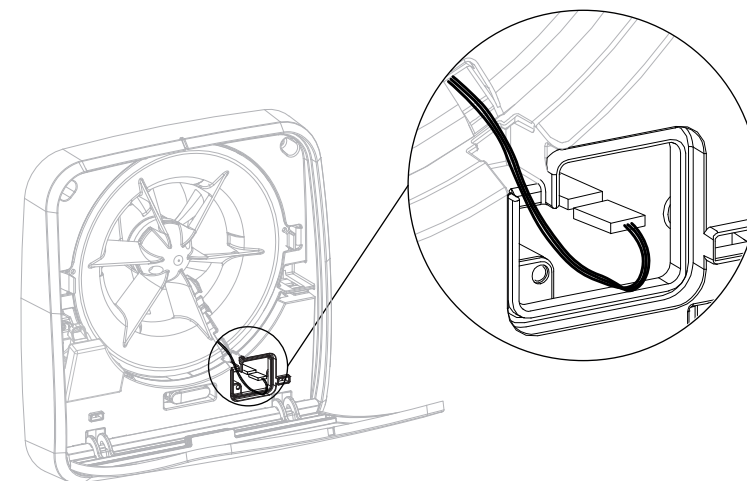


8

SPEED

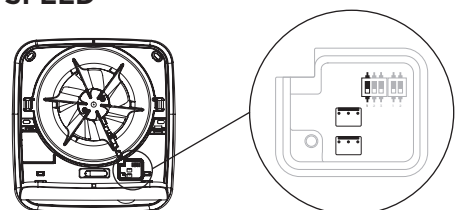


30 m³/h

 60 m³/h




9


HUMIDITY

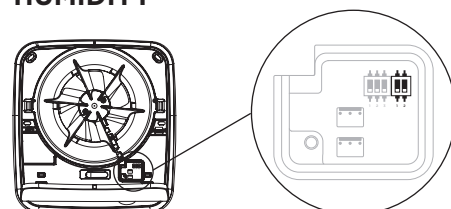


40%*

 


60%*

 

75%*

 


90%*

 


* The declared thresholds are based on test carried out in a climate chamber at a constant temperature of 20°C. The intervention threshold of the humidity sensor can differ from product to product and depends on environmental and atmospheric factors.

10


TIMER

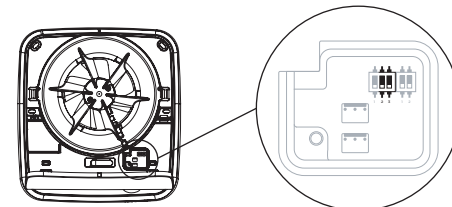


3'

 


7'

 

15'

 

25'

 

11

